



Instruction Manual
Chronograph Heritage

Chronograph

Heritage

Movement

La Joux-Perret L110 Automatic. Power Reserve 60 hours. Execution Premium (Top)

Functions

Hours, minutes, small seconds, and chronograph. Small seconds at 9h, minutes counter at 12h, hours counter at 6h. Date display at 6h.

Starting the Watch

If the watch has stopped, turn the crown in Position I clockwise (upwards) a few times to restart it. When worn regularly, the natural movement of the wrist will keep the watch charged.

Handling and Corrections

- Manual Winding: With the crown in Position I, rotate it clockwise (upwards) to wind the watch manually.
 - Date Setting: Pull the crown to Position II and turn it clockwise (upwards) to set the date.
 - Time Setting: Pull the crown to Position III and turn it counterclockwise (downwards) to set the time.
 - Chronograph Start/Stop: Press button A to start or stop the chronograph.
 - Chronograph Reset: Press button B to reset the chronograph, only after stopping it with button A.
- Use the chronograph functions only when the crown is fully closed.

Warning

Do not fix the date when the hands are between 11:00 P.M. and 03:00 AM.

Maintenance

To ensure a service that meets the brand's standards, any servicing of your watch must be carried out by CyS SA customer service or an approved watchmaker. Whenever repairs are made during the warranty period, you must present the proof of warranty, with the date and name of the retailer where the watch was purchased.

- I. Running position and manual winding
- II. Date setting
- III. Time setting

- A. Start/Stop chrono
- B. Reset chrono

- 1. Hour hand
- 2. Minute hand
- 3. Second hand
- 4. Hour counter
- 5. Minute counter
- 6. Second chrono
- 7. Date display



